



## Technical data

Repair instructions second-stage demand valve  
2725, 2941, 2961, 3546

Repair instructions first stage 2801, 2962, 3580

Repair instructions first stage 2808, 3580-10, 3790, 3790-10

Final adjustment Jetstream

Final adjustment Oceanair

